

## Setting Multi Code Wireless Keyless Entry Model 4200

1. If batter is hooked up, disconnect and press any button, wait 30 seconds, hook battery back up and proceed to step #3.
  2. If battery is unhooked, connect and proceed to next step.
  3. Press RADIO LEARN 2 times.
  4. Enter Code 1-2-3-4
  5. Enter numbers that are in the “ON” position in the radio receiver. “ON” position is when the switch is pointed down toward number. (use “0” for #10 switch).
  6. Press “RADIO LEARN” 1 time. (Wait until light goes off before proceeding).
- 
7. Press “ACCESS LEARN” 2 times.
  8. Enter code 1-2-3-4. (If changing code, enter existing code)
  9. Enter customer’s code (4 letters or numbers)
  10. Press “ACCESS LEARN” 1 time.
  11. Enter customer’s code. Operator should work. If not, reprogram starting at step 8. If it fails again, reprogram starting at step 1.